


General

This type of refrigerator is widely used in places such as hotels ,offices, student dormitories and houses. It is mostly suitable for freezing and preserving foods. It has the following advantages: small size, lightweight, low electric consumption and ease of use.

Main configuration: (models may vary)

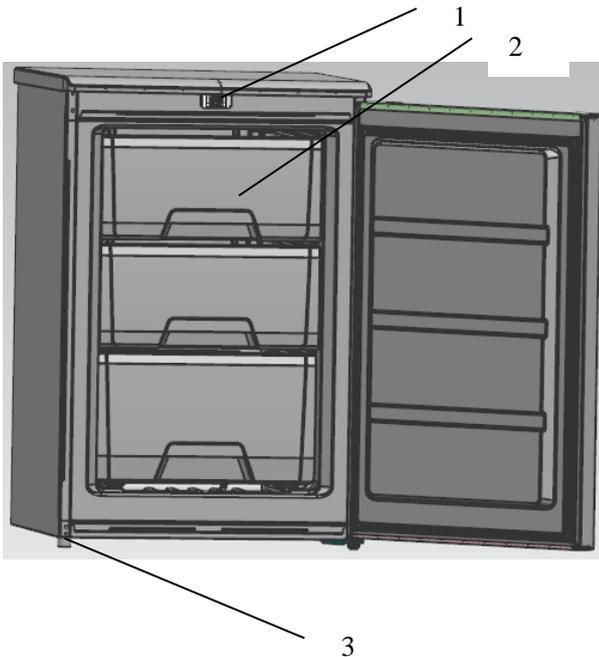

1. Thermostat
2. Drawer
3. Leveler leg

UNPACKING YOUR NEW FREEZER

WARNING: Use two or more people to move Freezer.

Failure to do so can result in back injury.

- Remove tape and any labels from your Freezer before using (except the rating label).
- To remove any remaining tape or glue, rub the area briskly with your thumb.
- Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your Freezer.
- When moving the Freezer, do not tilt the Freezer beyond 45° from upright position.

CLEANING BEFORE USE:

After you remove all of the packaging materials, (especially the foam between the outside condenser and cabinet) clean the inside of your Freezer before using it.

SPACE REQUIREMENTS

WARNING: Keep flammable materials and vapours, such as gasoline, away from the Freezer.

Failure to do so can result in death, explosion, fire or burns.

- To ensure proper ventilation for your Freezer, allow for 200mm space on each side between walls, 200mm space between back of your Freezer and the wall, and 300mm space between counter top

and the roof or ceiling.

- If you are installing your Freezer next to a fixed wall, leave sufficient space on the hinge side to allow for the door to swing open.
- Never install your Freezer near heat source and direct sun.

ELECTRICAL REQUIREMENT

WARNING: DO NOT REMOVE EARTH PIN FROM PLUG.

DO NOT USE AN ADAPTOR.

DO NOT USE AN EXTENSION CORD!!

Failure to follow these instructions can result in death, fire or electrical shock.

Before you move your Freezer into its final location, it is important to make sure you have the proper electrical connection.

Recommended Earthing Method

A 220~240 Volt /50 Hz AC only 10 ampere fused and properly earthed electrical supply is required. It is recommended that a separate circuit serving only this appliance be provided. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

NOTE: Before performing any type of installation, disconnect the Freezer from the electrical source. When you are finished, connect the Freezer to the electrical source and reset the control to the desired setting.

LEVELING

If the Freezer is not level during installation, the doors may not close or seal properly, causing cooling, frost, or moisture problems. It is very important for the Freezer to be level in order to function properly.

To level your Freezer you may either turn the level leg clockwise to raise that side to the Freezer or turn counter – clockwise to lower that side.

NOTE: Have someone tilt the freezer slightly backwards to take some weight off the leveling leg while making adjustments.

USE OF THE APPLIANCE

To obtain the best possible results from your Freezer, it is important that you operate it properly.

Temperature Control (Some models may vary)

The temperature in the freezer is controlled by the thermostat control knob. It is located at the top-front of the freezer. Turn the thermostat control knob up or down to regulate the temperature inside the freezer. The markings on the control knob indicate “1~4” for different temperature levels. **The temperature decreases with position “1” being the warmest and position “4” being the coldest.**

For South African conditions, choose setting number “3” or “4”.

Store Frozen Food

When using the freezer for the first time or after defrosting, turn the temperature control to set “4” for at least two hours before loading any food into the Freezer.

All frozen food products you purchase should be placed in the freezer as soon as possible to avoid the frozen food from defrosting. Storage recommendation printed on the packaging of frozen food by the manufacturers should be always be followed.

Be careful that the drawer or food does not interfere with the refrigeration pipeline.

Freezing Fresh Food

Ensure that your freezing operations are carried out under the most hygienic conditions as freezing alone does not sterilize the food. It is advisable to freeze the food by packing it into separate meal portions and not in bulk form. Never put hot or even warm foodstuffs into the freezer. Prior to storing food, pack it in plastic bags, aluminum sheets or freezing containers and place into the freezer. See the data sheet at the rear of this booklet for the maximum permissible amount in kilograms of fresh food that can be frozen in any 24 hour period with a room temperature of 25°C. Never freeze more than the maximum permissible amount.

Note: Never put glass bottled food or drinks in the freezer compartment.

.For best performance, leave enough space in the Freezer compartment for air to circulate around the packages.

Notice: You can use this unit without the drawers under some conditions.

Defrosting

Remove the mains plug from the wall socket, open the door and remove all the food. Defrost using a plastic scraper, or let the temperature rise naturally until the frost melts. Then wipe away the remaining ice and water, after this plug the freezer back into the mains supply.

Note: To avoid damaging the freezing compartment wall, **do not use any sharp objects** to remove the frost or separate the frozen food. The guarantee falls away should you use a sharp object.

Cleaning your freezer

Before you start to clean your freezer remove the mains plug from the power supply.

Use a clean sponge or soft and a mild detergent in warm water.

Hand wash, rinse and dry all surfaces thoroughly.

Do not use cleaning waxes, concentrated detergents, bleaches or cleaners containing petroleum on plastics and rubber parts.

Never use paper towels, window sprays, scouring cleansers or flammable fluids on plastic parts as these can scratch or damage the inside of the freezer.

Clean with a damp cloth and then dry with a soft cloth.

PROLONGED OFF PERIODS

If the freezer is not in use for a long period of time, proceed as follows:

Disconnect the freezer from the main supply by removing the plug from the wall socket.

Clean and dry the inside as instructed under the heading “cleaning the Freezer”.

Leave the door open to prevent any unpleasant smells from building

up while the freezer is not in use.

TROUBLESHOOTING

In case of malfunction, you can solve many common problems easily before contacting the retailer or Agent to avoid costs being incurred.

Your Freezer will not operate...Check if

- The power supply cord is unplugged.
- Check the adaptor (if you are using one)

The doors will not close completely...Check if

- The drawers are out of position.
- The door gaskets/seals are dirty.
- The Freezer is not level.

The freezer is noisy when running...Check if

- The freezer is installed level and it is not in contact with another appliance or kitchen furniture. Place rubber pads under the feet.

The freezer does not cool sufficiently...Check if

- If the door has been opened too often, or it has been left open. It will take time for the freezer to reach its set temperature.
- Check that there is sufficient airflow at the rear of the freezer due to insufficient clearance.

The following characteristics should not be looked upon as a problem.

- A gentle tricking flow sound caused by coolant flowing in the pipes.
- Compressor operating at high temperature

REQUESTING ASSISTANCE OR SERVICE:

Please note that should a technician be dispatched and it is determined that the fault is not a manufacturing or factory fault, the costs of the call-out and any subsequent labour cost will be incurred by the customer.

If the problem is not due to one of the items listed in Troubleshooting, Contact the dealer or authorized Service Company.


RECOMMENDATIONS

- 1) **WARNING** – Keep any ventilation openings in the appliance enclosure or in the built-in structure clear of any obstruction.
- 2) **WARNING** – Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 3) **WARNING** – Do not damage the refrigerant circuit.


- 4) **WARNING** – Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 5) The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- 6) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 7) Children should be supervised to ensure that they do not play with the appliance.
- 8) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid an electrical hazard.
- 9) Please abandon the refrigerator according to local regulators.
- 10) Please abide by all local regulations regarding disposal of the appliance due to its flammable refrigerant and blowing gas. Before you scrap the appliance, please remove doors to prevent any possibility of children being trapped inside the unit.

Refrigerator door installation guidelines on swapping left & right (optional)


1. Remove the screws behind the fixed roof with cross-slot screwdriver and remove the cover from the freezer.

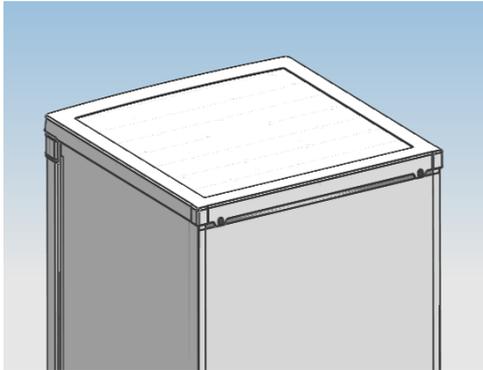


2. Remove the screws fixing the top-hinge with a cross-slot screwdriver.

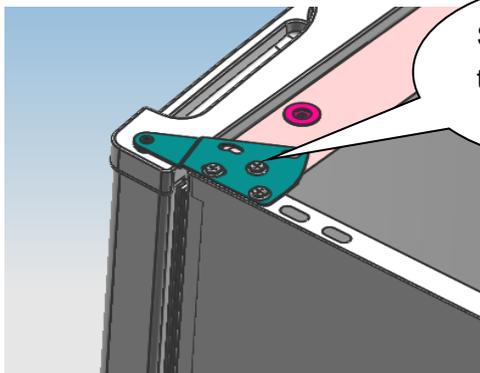

3. Move the top-hinge and the door limit block and the door bearing bush to the other side

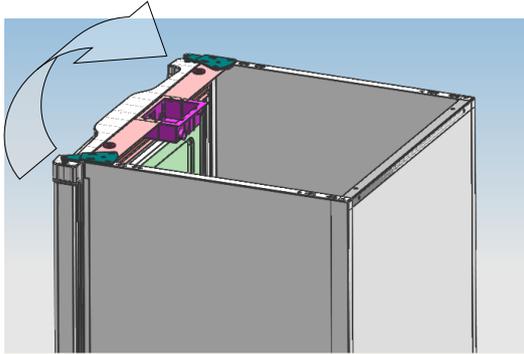


4. Move the door bearing bush and the limit block to the other side.

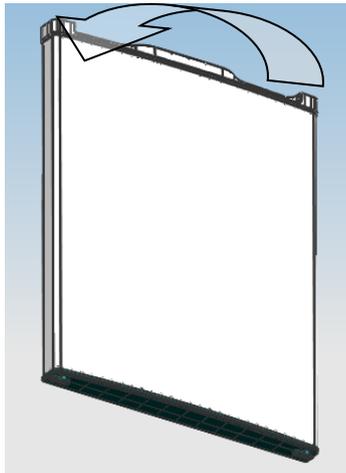


5. Disassemble the screws fixing the bottom-hinge with a cross-slot screwdriver and move the hinge to the other side then secure tightly


Note: the refrigerator incline angle must be less 45°.

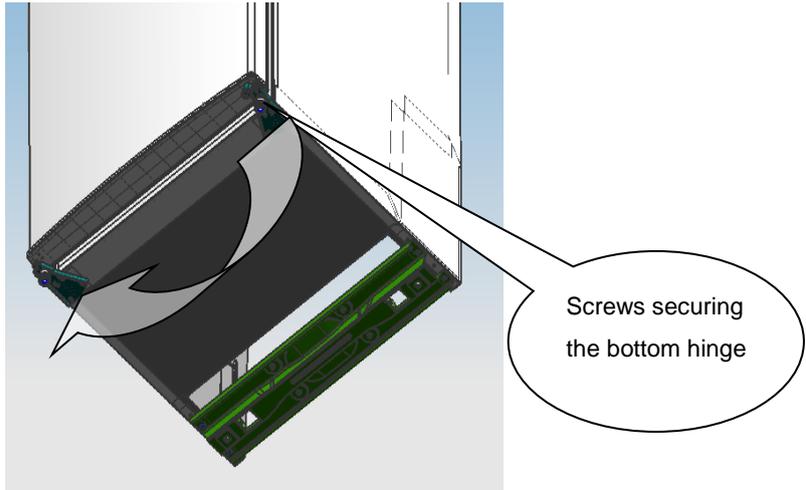

6 Move the adjustable foot to the other side and make sure the cabinet is level

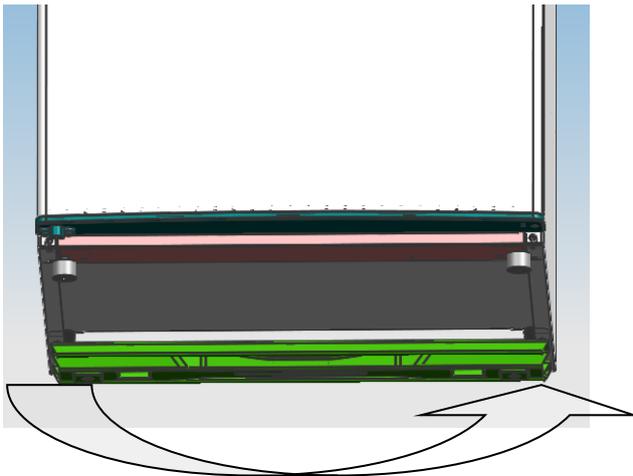

7. Set the door in the right position by ensuring the door is parallel with the freezer body, tighten the top-hinge, secure the top cover.

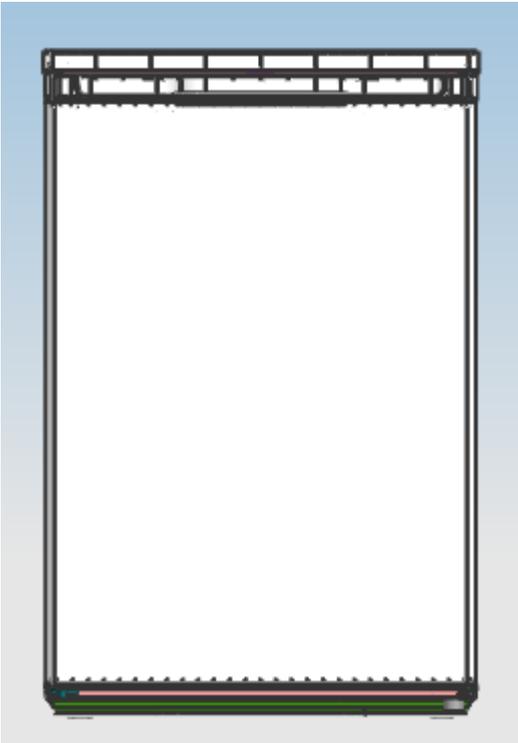

NOTE:

To take the door off, it is necessary to tilt the Appliance backward. You should rest the Appliance on something solid such as a chair, just below the top panel.

Do not lay the Appliance completely flat as this may damage the cooling system.